


REVISIONS

REV.	DESCRIPTION	DATE	APPRVD.

Notes:

1. To achieve the highest recovery, size the storage tank circulation pump for maximum capacity (N-1321M: 12 gpm @ 50 ft. of head (140°F setting or less) plus piping losses through the system). Verify the supply pressure to the unit is at least 30 PSI.
2. Thermostat of storage tank should be set 10°F below the output set temperature of the water heater.
3. Set the Aquastat to 10°F below the set output temperature of the thermostat.
4. Noritz recommends the use of Isolation Kit (IK-WV-9) with installation. These kits include an integrated shut-off and service valve with unions and a pressure relief valve.

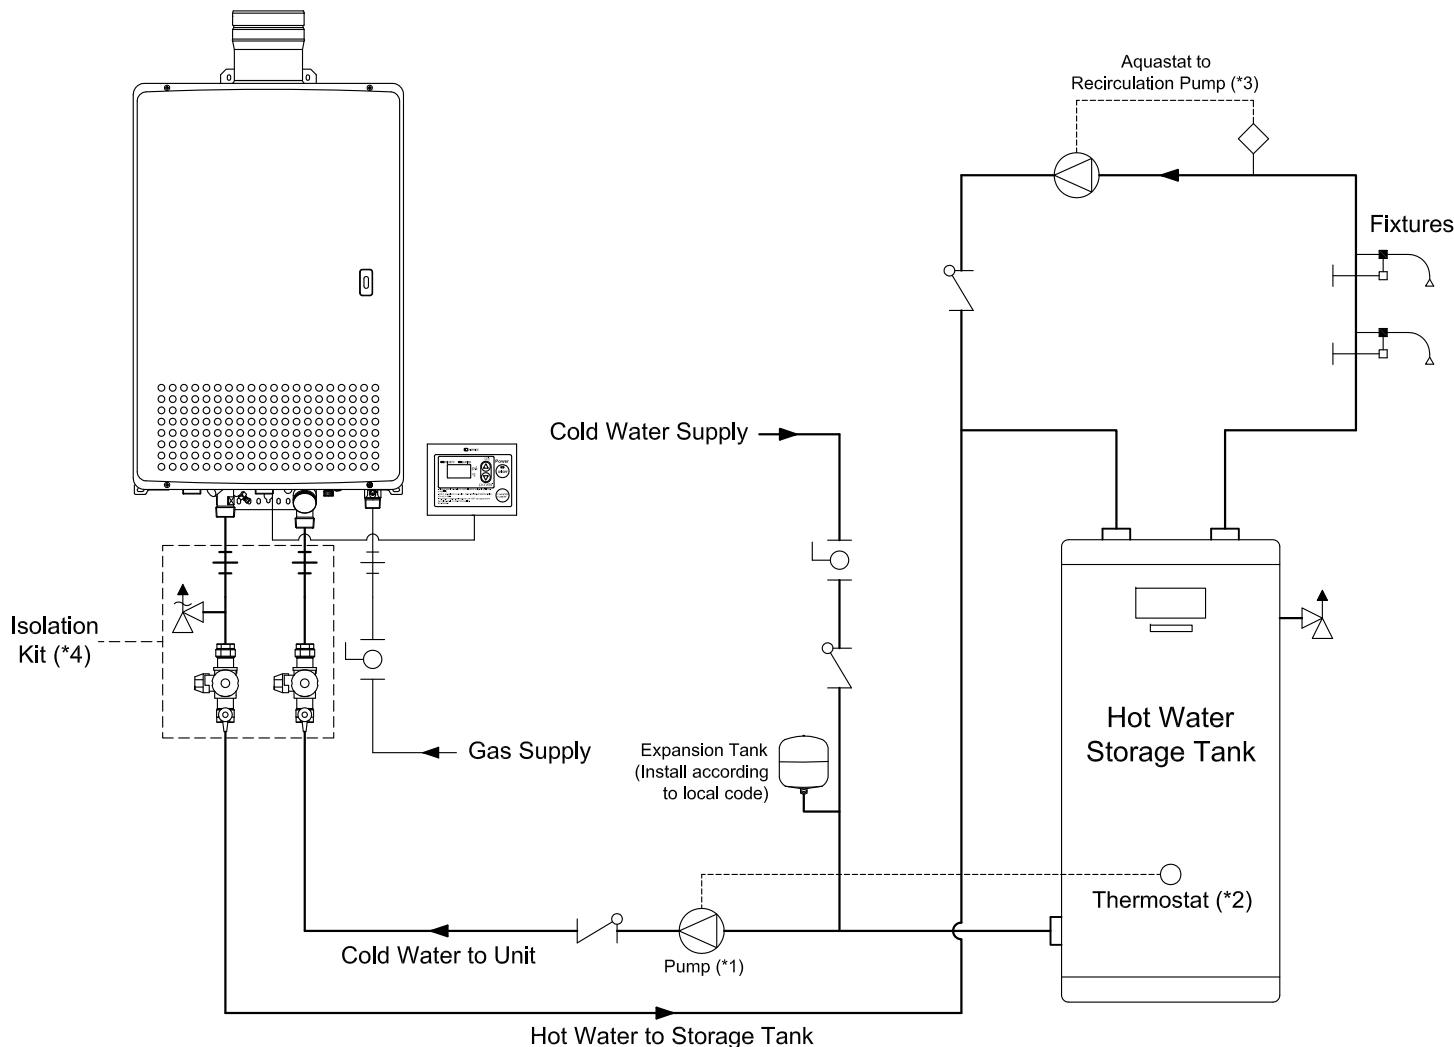

**NORITZ**  
 11160 Grace Avenue  
 Fountain Valley, California 92708  
 866-7NORITZ (866-766-7489)  
 www.noritz.com

**MODEL:**  
 N-1321M-ASME

**APPLICATION:**  
 Domestic Hot Water  
 Recirculation  
 Storage Tank

**DRAWING NUMBER:**  
 (3b1-3)N1321M

**DRAWING DATE:**  
 August 12, 2009

**Noritz Accessories**

RC-7649M (Remote Controller)

RC-CORD10 (10' Remote Controller Cord, optional in 26')

VC-132 (Outdoor Vent Cap, place on top of unit)

*Note: This diagram is for reference only. Installation must comply with State and Local Code, all gas and water pipe must be sized correctly to specific length, according to accepted engineering methods or the UPC Code for Noritz Water Heaters to operate correctly.*

- |  |  |  |  |
|--|--|--|--|
|  | Shut-off Ball Valve  |  | Aquastat (Honeywell Model #L6006A or L6006C) |
|  | Check Valve  |  | Pump   |
|  | Union  |  | Mixing Valve                                 |
|  | Pressure Relief Valve (Watts 174A, Zurn P3000BR, Cash Acme F-82) |  | Thermal Expansion Tank                       |