

	REVISIONS		
REV.	DESCRIPTION	DATE	APPRVD.

Notes:

- 1. To achieve the highest recovery, size the storage tank circulation pump for maximum capacity (N-0931M: 8.0 gpm (each) @ 40 ft. of head plus piping losses through the system. Verify the supply pressure to the units is at least 30 PSI.
- 2. Thermostat of storage tank should be set 10°F below the output set temperature of the water heater.
- 3. System Controller can be used to connect a 2 or more unit multisystem application. Refer to SC-201-6M manual for detailed instructions in setting up system controller.
- 4. When using a system controller, use only a single remote
- 5. Size the piping to allow for the maximum flow rates of the units
- 6. Set the Aquastat to 10°F below the set output temperature of the thermostat on the storage tank.
- 7. Noritz recommends the use of Isolation Kit (IK-WV-8) with installation. Connections are available in Threaded or Sweat. These kits include an integrated shut-off and service valve with unions and a pressure relief valve.

NORITZ

APPLICATION:

DRAWING NUMBER:

DRAWING DATE:

Domestic Hot Water

Recirculation

2-6 Unit Multi-System

Storage Tank

(3b2-6-3)N931M

August 5, 2009

11160 Grace Avenue Fountain Valley, California 92708 866-7NORITZ (866-766-7489) www.noritz.com

MODEL. **Noritz Accessories** N-0931M


RC-7649M (Remote Controller)


RC-CORD10 (10' Remote Controller Cord, optional in 26')


VC-4-1 (Outdoor Vent Cap, place on top of unit)

SC-201-6M (System Controller, for 2 or more unit Multi-System)

Note: This diagram is for reference only. Installation must comply with State and Local Code, all gas and water pipe must be sized correctly to specific length, according to accepted engineering methods or the UPC Code for Noritz Water Heaters to operate correctly.

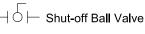

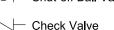

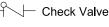



Pressure Relief Valve (Watts 174A, Zurn P3000BR, Cash Acme F-82)



Aquastat (Honeywell Model #L6006A or L6006C)



Pump



Mixing Valve



Thermal Expansion Tank