

REVISIONS			
REV.	DESCRIPTION	DATE	APPRVD.

Notes:

- To achieve the highest recovery, size the storage tank circulation pump for maximum capacity (N-0751M: 5.0 gpm (each) @ 20 ft. of head plus piping losses through the system).
 Verify the supply pressure to the unit is at least 30 PSI.
- 2. Thermostat of storage tank should be set 10°F below the output set temperature of the water heater.
- 3. Set the Aquastat to 10°F below the set temperature at the
- Quick Connect Cable is only available for 2 unit Multi-System.
 When Quick Connect Cable is in use, pump control and tub alarm features are disabled.
- 5. When connecting 2 devices, use only a single remote controller.
- 6. Size the piping to allow for the maximum flow rates of the units.
- 7. Noritz recommends the use of Isolation Kit (IK-WV-7) with installation. Connections are available in Threaded or Sweat. These kits include an integrated shut-off and service valve with unions and a pressure relief valve.

NORITZ

11160 Grace Avenue Fountain Valley, California 92708 866-7NORITZ (866-766-7489) www.noritz.com

MODEL:

N-0751M

APPLICATION:

Domestic Hot Water Quick Connect System Recirculation Storage Tank

DRAWING NUMBER:

(3b2-3)N751M

DRAWING DATE:

August 5, 2009

Noritz Accessories

RC-7649M (Remote Controller)


RC-CORD10 (10' Remote Controller Cord, optional in 26')

VC-4-1 (Outdoor Vent Cap, place on top of unit)

QC-1M (Quick Connect Cable, for 2 unit Multi-System)

Note: This diagram is for reference only. Installation must comply with State and Local Code, all gas and water nine must be sized correctly to specific length, according to accepted

all gas and water pipe must be sized correctly to specific length, according to accepted engineering methods or the UPC Code for Noritz Water Heaters to operate correctly.

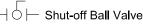

Check Valve



Pressure Relief Valve (Watts 3L, Zurn P1000A, Cash Acme FWL-2)



Aquastat (Honeywell Model #L6006A or L6006C)



Pump



Mixing Valve



Thermal Expansion Tank