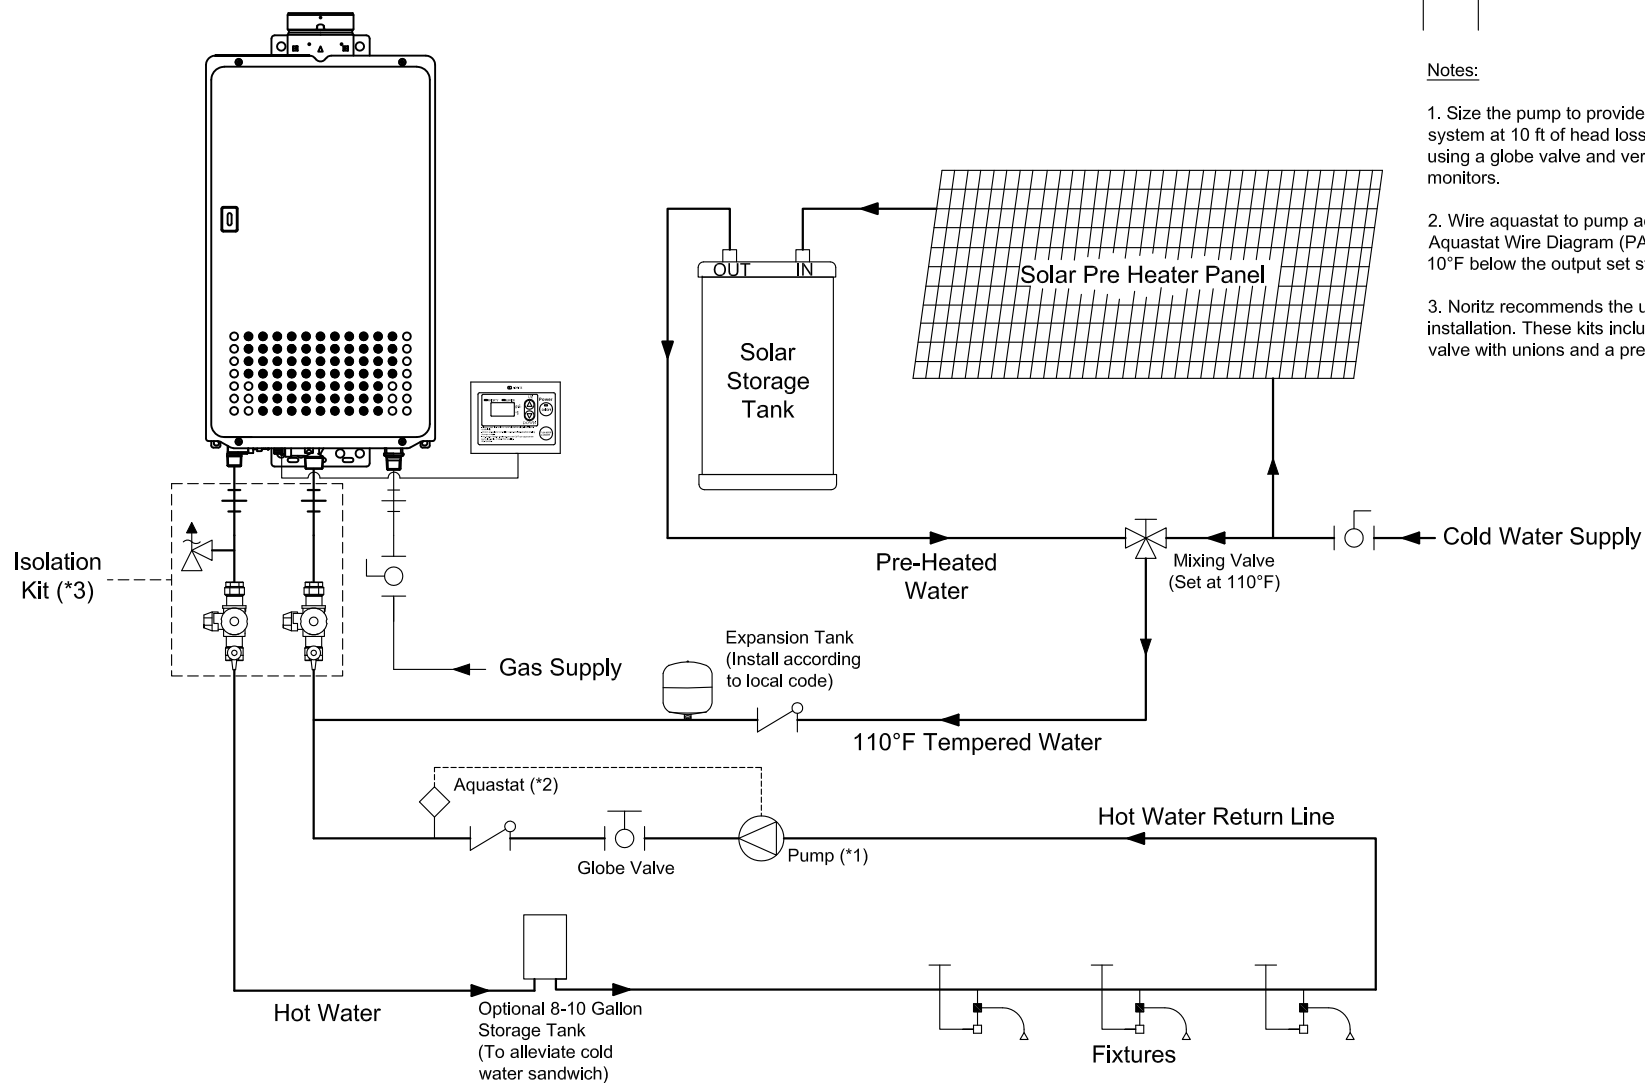


REVISIONS

REV.	DESCRIPTION	DATE	APPRVD.

Notes:

 


1. Size the pump to provide a maximum of 1.5 GPM through the system at 10 ft of head loss plus piping losses. Adjust the flow using a globe valve and verify the flow rate with the maintenance monitors.
2. Wire aquastat to pump according to "Circulation Pump to Aquastat Wire Diagram (PAWD.pdf)." Aquastat should be set to 10°F below the output set stemperature.
3. Noritz recommends the use of Isolation Kit (IK-WV-4) with installation. These kits include an integrated shut-off and service valve with unions and a pressure relief valve.



 

 

 



11160 Grace Avenue  
 Fountain Valley, California 92708  
 866-7NORITZ (866-766-7489)  
 www.noritz.com

<b>MODEL:</b>	N-0631S
<b>APPLICATION:</b>	Domestic Hot Water Solar Pre-Heat Recirculation
<b>DRAWING NUMBER:</b>	(4b)N631S
<b>DRAWING DATE:</b>	September 22, 2008

**Noritz Accessories**

-  RC-7649M (Remote Controller, Optional with N-0531S/N-0631S)
-  RC-CORD10 (10' Remote Controller Cord, optional in 26')
-  VC-4-1 (Outdoor Vent Cap, place on top of unit)

*Note: This diagram is for reference only. Installation must comply with State and Local Code, all gas and water pipe must be sized correctly to specific length, according to accepted engineering methods or the UPC Code for Noritz Water Heaters to operate correctly.*

	Shut-off Ball Valve		Aquastat (Honeywell Model #L6006A or L6006C)
	Check Valve		Pump
	Union		Mixing Valve
	Pressure Relief Valve (Watts 3L, Zurn P1000A, Cash Acme FWL-2)		Thermal Expansion Tank