

Pipe cover

H32-K PC-084M
 H39-K PC-063S-069M
 H33-K PC-1S
 H53-K PC-2S
 H54-K PC-3S(-SUS)
 H20-K PC-4S(-SUS)
 H58-K PC-5S

Installation Manual



Warning

Requests to Installers

Read this installation manual carefully, and follow the installation instructions.

Included Accessories

Check for any missing items before starting installation.

Part No.	Part	Q'ty	Part No.	Part	Q'ty
①	Side cover (left/right)	1 each	⑥	Panel screw	2
②	Pipe front cover	1	⑦	Truss screw small	2
③	Pipe cover top	1	⑧	Tapping screw with PW	6
④	Pipe cover bottom front	1	⑨	Phillips head screw	2
⑤	Pipe cover bottom rear	1	⑩	Wall anchor	2

Installation

Refer to the illustration below for installing the pipe covers.

