


REVISIONS			
REV.	DESCRIPTION	DATE	APPRVD.

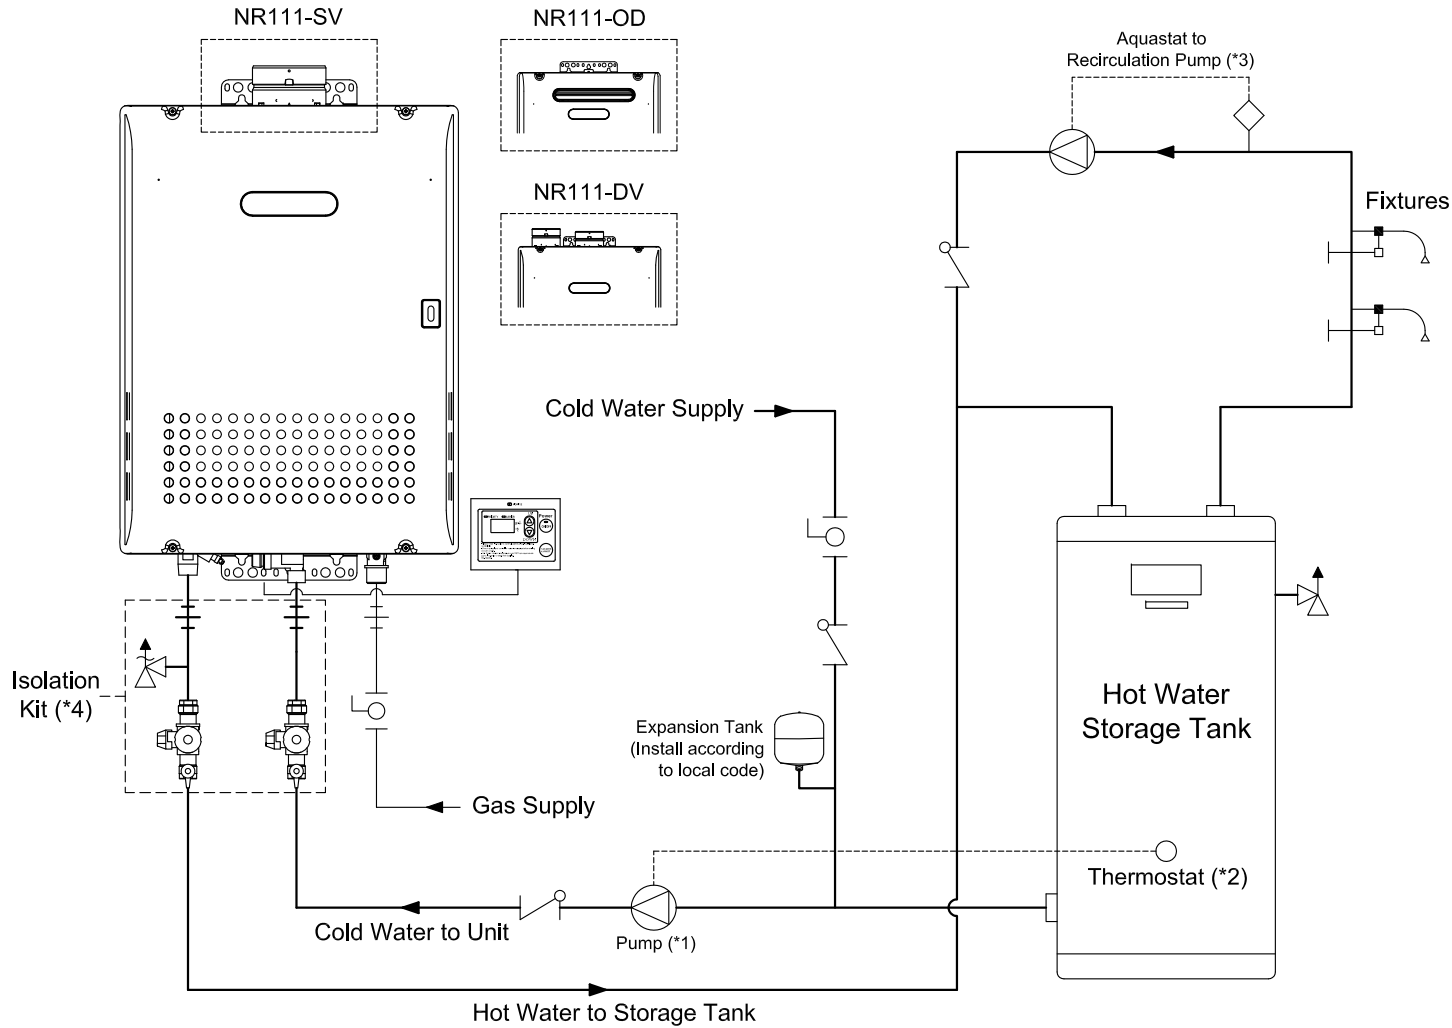

**Notes:**

1. To achieve the highest recovery, size the storage tank circulation pump for maximum capacity (NR111 Series: 8.0 gpm @ 40 ft. of head plus piping losses through the system). Verify the supply pressure to the unit is at least 30 PSI.
2. Thermostat of storage tank should be set 10°F below the output set temperature of the water heater.
3. Set the Aquastat to 10°F below the set output temperature of the thermostat.
4. Noritz recommends the use of Isolation Kit (IK-WV-8) with installation. Connections are available in Threaded or Sweat. These kits include an integrated shut-off and service valve with unions and a pressure relief valve.



11160 Grace Avenue  
Fountain Valley, California 92708  
866-7NORITZ (866-766-7489)  
www.noritz.com

<b>MODEL:</b>	NR111 Series
<b>APPLICATION:</b>	Domestic Hot Water Recirculation Storage Tank
<b>DRAWING NUMBER:</b>	(3b1-3)NR111
<b>DRAWING DATE:</b>	November 17, 2009

**Noritz Accessories**

- RC-7649M (Remote Controller)
- RC-CORD10 (10' Remote Controller Cord, optional in 26')
- VC-4-1 (Outdoor Vent Cap for -SV model only)

*Note: This diagram is for reference only. Installation must comply with State and Local Code, all gas and water pipe must be sized correctly to specific length, according to accepted engineering methods or the UPC Code for Noritz Water Heaters to operate correctly.*

- Shut-off Ball Valve
- Check Valve
- Union
- Pressure Relief Valve (Watts 174A, Zurn P3000BR, Cash Acme F-82)
- Aquastat (Honeywell Model #L6006A or L6006C)
- Pump
- Mixing Valve
- Thermal Expansion Tank