


REVISIONS

REV.	DESCRIPTION	DATE	APPRVD.

Notes:

1. Choose the system with a properly sized pump to provide enough flow through the system with the head pressure equal to the loss through the water heater plus piping losses. Contact the manufacturer for available models and specifications to see which is most compatible with the plumbing system.
2. The best location when installing the pump and included accessories would be at the fixture that is farthest away from the water heater. In case hot water needs to be delivered to two different directions from the water heater, an additional On-Demand recirculation system may be needed.
3. Shut off the water supply to the system before proceeding with the installation of accessories.
4. On-demand recirculation systems are operated with the use of a push-button or a motion sensor that is activated by the customer. This significantly reduces the number of circulation cycles throughout the day while reducing operating costs and wear on the water heater. An on-demand system is required to maintain the full Noritz residential warranty. Refer to the Noritz limited warranty for complete details.
5. Noritz recommends the use of Isolation Kit (IK-WV-7) with installation. These kits include an integrated shut-off and service valve with unions and a pressure relief valve.

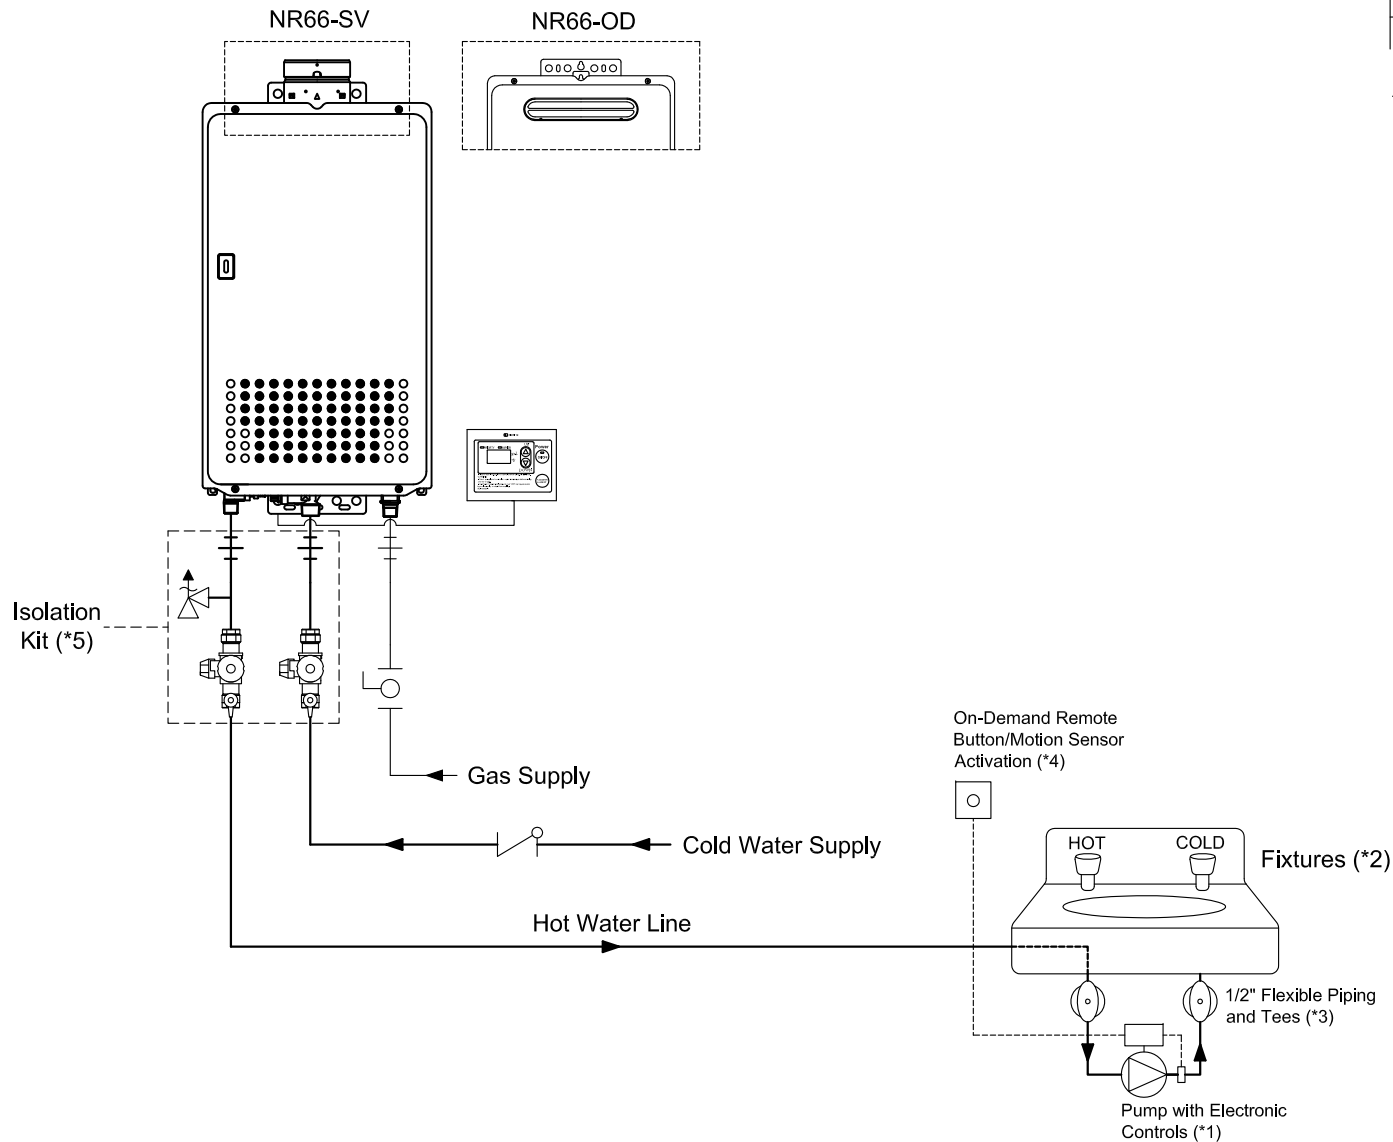

11160 Grace Avenue  
Fountain Valley, California 92708  
866-7NORITZ (866-766-7489)  
www.noritz.com

<b>MODEL:</b> NR66 Series
<b>APPLICATION:</b> Domestic Hot Water On-Demand Recirculation
<b>DRAWING NUMBER:</b> (2a3)NR66
<b>DRAWING DATE:</b> March 10, 2010

**Noritz Accessories**

- RC-7649M (Remote Controller, Optional with NR66/NR71)
- RC-CORD10 (10' Remote Controller Cord, optional in 26')
- VC-4-1 (Outdoor Vent Cap, for -SV models only)

*Note: This diagram is for reference only. Installation must comply with State and Local Code, all gas and water pipe must be sized correctly to specific length, according to accepted engineering methods or the UPC Code for Noritz Water Heaters to operate correctly.*

Shut-off Ball Valve	Aquastat (Honeywell Model #L6006A or L6006C)
Check Valve	Pump
Union	Mixing Valve
Pressure Relief Valve (Watts 3L, Zurn P1000A, Cash Acme FWL-2)	Thermal Expansion Tank